



从矿机界面操作



【 固件升级 】 固件更新





【<mark>固件升级</mark>】上传update文件

		哈希率	温度	功率	错误	性能 ス
1 仪表板		105.91 当前: 105.7 / Theor: 123.4	53 ⁻ -71 ⁻ 电路板: 38 ⁻ -56 ⁻	3069 估计数据		3670 watt ~ 120 TH Disabled
		IH/s IA 茶家	固件更新	Antminer S19J	ro ami v1.2.6-rc5 🏨 💙	32(4): 34.6 J/TH PSU: APW1212158
1 挖矿		180 120	保存当前矿机配置 刷机后将保存设备的当前配置			100% 75% 50%
↓ 系统						25% 0%
		范围:				1/181 12/183 24/183
	新 二 分 45.204 45.204 45.204 45.204 45.204	矿池 习 45.204.13.203:330 zig888888.8x148	8文件拖放到此处或单击以上传 图件文件:			风扇 7 风扇 1
		45.204.13.203:330 zfg888888.8x148 45.204.13.203:330 zfg888888.8x148				风崩 3 5880 RPM 88 560 RPM 88
		DevFee: Online		◇ 刷新矿机		根式: 自动 风扇转速: 97%
		电路板 1 7 32.56 TH/s 0.0 HR (00.86%) 错 635.00 Mhz 13 频率 电印	00 H/s 53 - 70 °C 周 温度 20 V 1223 W E 初時	电路板 2 刁 35.85 TH/s 0.00 H/s ^{HR (87.46%)} 错误 635.00 Mhz 13.20 V 频率 电压	53 - 70 °C 温度 1223 W 功耗	 电路板3 ス 37.28 TH/s 0.00 H/s 53 - 71 *C Hit (03 19%) 皆頃 高度 655.00 Mhz 13.20 V 1223 W 病率 电压 20H
			19 5		8 6	112 10 4
		47 JEW 44		Y JEW T		



固件升级 上传完成后,刷新矿机,完成固件更新







从Toolkit界面操作



【固件升级】_{点击"命令"}







【固件升级】点击"更新固件"



	t ☰ 视图 ~
Z Antminer S19J Pro 105.74 TH/s 3669 W 53-71° C 5850 6000 5820 4590 3670 / 3670 / / ● 1.2.6+rc5 1:58 ● ひゃ の の の の の	● 章 范 插:45.204 aml nand PIC 合 《 自动超频 :
21 思想得1个 🗙	
操作 品 更改矿池 三 重置超频配置 ② 保存诊断报告 ③ 查找矿机 採用 屈用 四件 ③ 安装四件 ③ 更新雷件 ● ● 母紙 ● 母紙 ● 母紙 ● 母紙 ● 番 ● 日紙 ● ● 日紙 ●	
@2025 HashCore. 保留所有权利	★###考明用



固件升级)选择文件夹—>更新选项—>矿机型号—>更新固件







(☆) > jpro-02 test 2 ~ ↓ 1 合和、↓ 1 合和、↓ 1 合和、↓ 1 合素報、↓ 1 合素報、↓ 1	① 105.91 TH/s 读 3.67 kW ·	
	C 5850 6000 5820 4590 3670/3670// • 1.2.6-rc5 1:58 東小和時代 自己 起時記書/目前/商小和大 点 医件 の以行対詞 の第力	谷池1:45.204 aml nand PIC 6 《 自动超频 根 好1: zfg888 aml nand PIC 6 《 自动超频
	② 更新固件 ×	
	更新固件 1 台设备	
	✓ 是	
	× 取消	
	已法岸1个 X 29 隅高 【】 重新扫描 4 合令 >	

